




TCH-23000 R.P.01 INSTALLATION INSTRUCTIONS


Installation guide

1

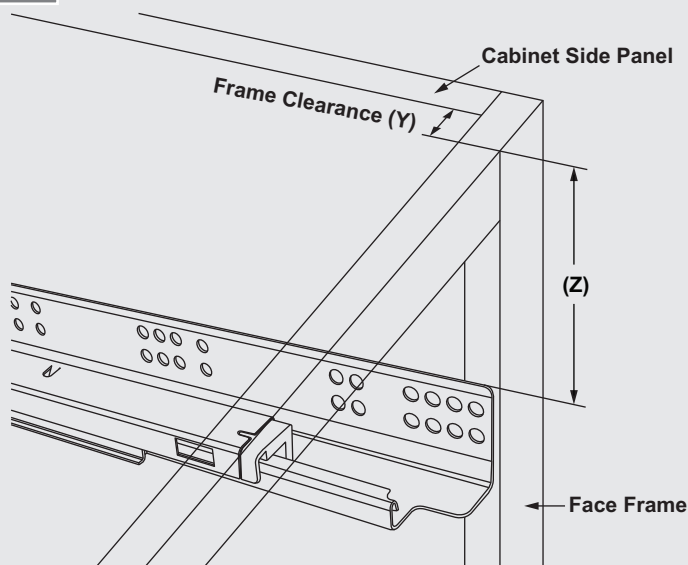


Measure the distance (Z) from the top of the Undermount Slide to the top of the cabinet.
Measure the distance (Y) of the Frame Clearance from the inside of the cabinet.

2

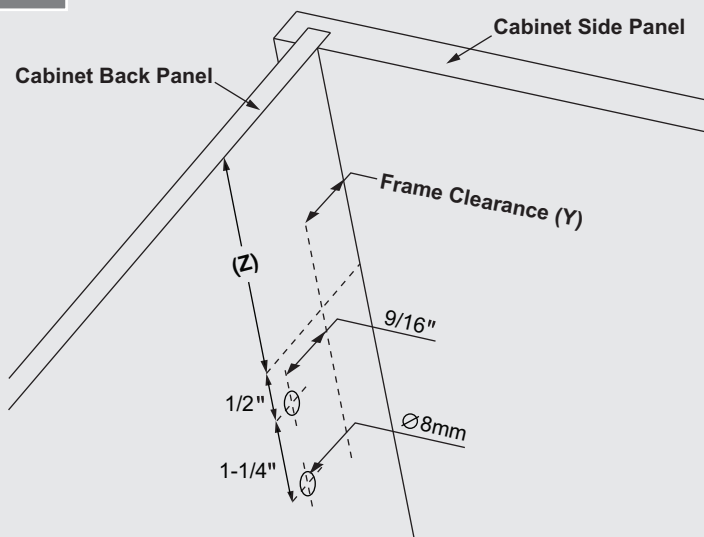


Apply all measurements in setup (1) to the back panel of the cabinet, and make marks.
Make a mark 9/16" from the mark (Y), then measure 1/2" and 1-1/4" consequentially down from mark (Z), and make marks for drilling.
Use 8mm drilling bit to drill the holes.

3

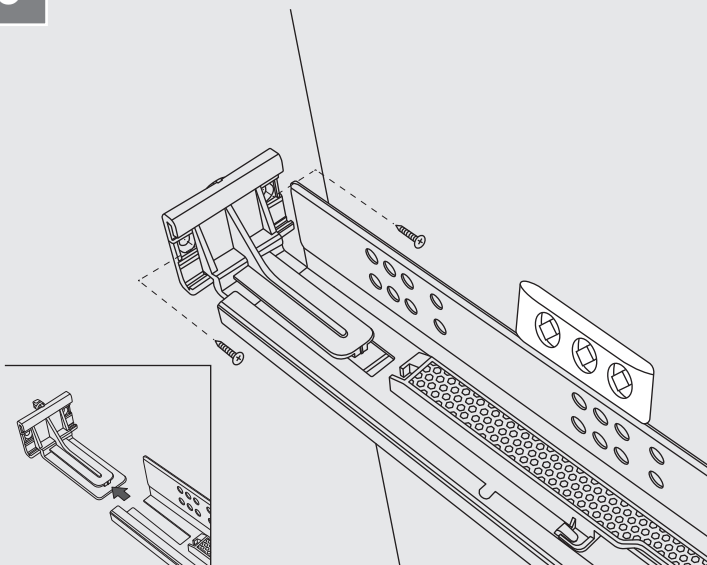

Place the Undermount Slide into the rear mount bracket, then insert the rear bracket into the pre-drilled holes, and secure the rear bracket with the provided screws.

4

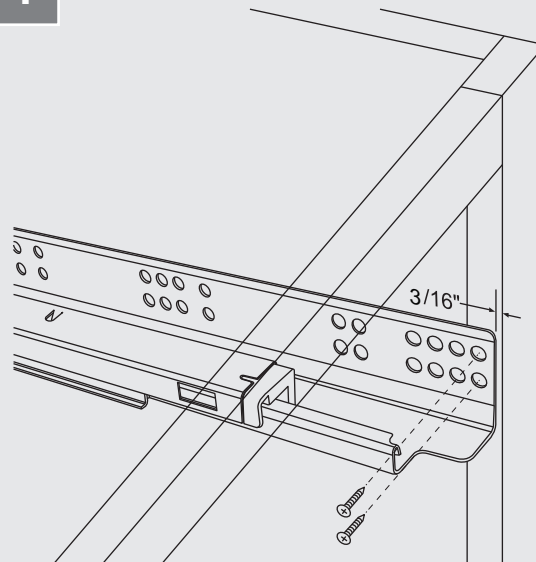

Place the Undermount Slide 3/16" deeper from the front of the cabinet.
Make sure each Slide is level and secure them with the provided screws.